



	86	87	88	89	90	91	92	93	94	95	96	97	98	99... to 2006	Common Connector Locations
Daihatsu			12 B	Examples for you.....					21 D						A: Engine bay, LH side of firewall or top of transmission
Ford															B: Engine bay, near one of the strut towers.
Holden															D: Under the driver's side dash.
Honda															E: Inside or below the glovebox.
Isuzu															I: In or next to the fusebox under the dash.
Kia															J: Under the left or right-hand kick panel or leftside of dash.
Mazda															K: Above or in the kick panel for the lefthand footwell.
Nissan															L: Beside (or taped to) the steering column.
Subaru															M: Engine bay, near / or in the fuse box or battery.
Suzuki															O: In the center console.
Toyota															R: Behind LH cover at rear of steering wheel.
															S: On engine bay firewall, or by cruise control actuator

Sample Only

To find which connector a vehicle has, you may need to try different years for that make because connector years overlap. (Years show when the connector was **first** used). The numbers 1 to 75 show the vehicle connectors or computer LED location. Connect as shown on the diagram. You do not need a Voltmeter or Led Tester for these systems, as they all give "flash codes".

